


***AUTOMATIC MONOBLOCS - CAPSULE DISPENSING,
CAPSULING & SELF-ADHESIVE LABELING
6050 - 6060 - 6080L - 6080T***

The labels are positioned on a conveyor belt in a light vacuum, and transferred to the bottles. This simple system caters for applying front and back labels to cylindrical or slightly conical bottles.

VACUUM BELT MACHINES

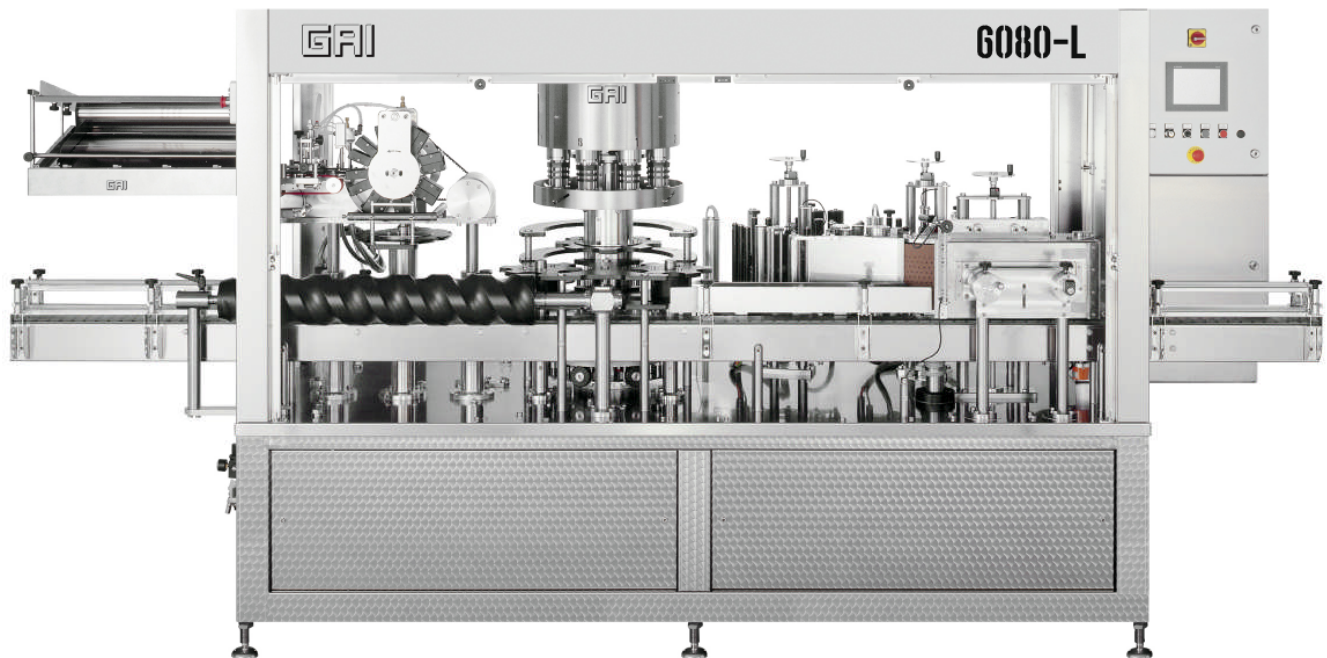

| MODELLO - MODEL | 6050-2 | 6060-2 | 6080-L | 6080-T |
|-----------------------------------------|-------------|-------------|--------------|-------------|
| AUTONOMIA CAPSULE - CAPSULE CAPACITY | 600 ÷ 1200 | 600 ÷ 1200 | 600 ÷ 1200 | 600 ÷ 1200 |
| TESTATE LISCIATRICI - SLEEKER HEADS | 1 otp | 6 | 8 | 0 |
| VELOCITA' LISCIATURA - SLEEKING SPEED | 1000 ÷ 1200 | 1000 ÷ 4000 | 2.000 ÷ 6000 | 0 |
| TESTATE TERMICHE - SHRINKING HEADS | 1 | 1 | 0 | 4 |
| VELOCITA' TERMICA - SHRINKING SPEED | 1000 ÷ 3000 | 1000 ÷ 3000 | 0 | 2000 ÷ 6000 |
| VELOCITA' EICHETTATRICE - LABELER SPEED | 1000 ÷ 4000 | 1000 ÷ 4000 | 2000 ÷ 6000 | 2000 ÷ 6000 |

DATI NON IMPEGNATIVI – NOT BINDING DATAS

| MODELLO - MODEL | 6050-2 | 6060-2 | 6080-L | 6080-T |
|-------------------------------------|-----------------------------|-----------------------------|------------|------------|
| STAZIONI ETICHETTA - LABEL STATIONS | 2 max | 2 max | 2 max | 2 max |
| MOTORI STAZIONE STATION MOTOR | Passo-passo Step by step | Passo-passo Step by step | Brushless | Brushless |
| Ø BOBINA ETICHETTE - LABEL REEL Ø | 400 MAX | 400 MAX | 400 MAX | 400 MAX |
| LUNGHEZZA ETICHETTE - LABEL LENGTH | 300 MAX | 300 MAX | 300 MAX | 300 MAX |
| ALTEZZA ETICHETTE - LABEL HEIGHT | 190 MAX | 190 MAX | 190 MAX | 190 MAX |
| GESTIONE - CONTROL | PLC + T.S. | PLC + T.S. | PLC + T.S. | PLC + T.S. |

DATI NON IMPEGNATIVI – NOT BINDING DATAS

All Vacuum Belt labelling machines can be supplied without the capsule dispensers and applicators!



Auckland Office: P.O.Box 25152 St. Heliers Auckland New Zealand
 Tel: +64 (09) 578 3740 Fax: +64 (09) 578 3741 E-mail: rickpenney@viniquip.co.nz
Hawke's Bay Office: P.O.Box 8276 Havelock North New Zealand
 Tel: +64 (06) 879 7799 Fax: +64 (06) 879 7736 E-mail: klos@viniquip.co.nz